GENERAL OPERATION:

Your Chicro is a very handy, very versatile tool. It will provide you the power you need, and it accepts a variety of 10440 batteries. For your convenience, we supply a quality 10440 battery with your light. Once installed, simply use the USB-C port on the light head to charge your light.

When moving away from the provided battery, you will see variations in performance. Some batteries may have more output than others, some may have more run-time than others. No matter what battery you choose, be certain to always use name-brand, approved batteries.

Each Chicro is fitted with a push-button tail cap switch. The switch features both a momentary and constant-on capability. A shallow press/hold will give you momentary. A full click will give you constant-on. A second click will turn it off.

BATTERY INSTALLATION:

The battery is installed from the front of the light.

To install the battery:

- 1. Remove the light head.
- 2. Insert the battery. Positive side must go to the head.
- 3. Put the light head back on and hand tighten.
- 4. Installation is complete. Function check with the switch.

LIGHT FUNCTION:

Your Chicro comes from the factory equipped with a high setting (100% power) and a low setting (10% power). There is no need to program an admin light such as this.

When you turn the light on, it will default to full power. If you want to move down to 10% power, simply tap or click the switch again.

The Chicro features momentary-on capability. To achieve a momentary-on, a shallow press/hold of the switch does so. To move into a constant-on state, simply click the switch.

Release or click to turn off.

POCKET CLIP INSTALLATION:

The Chicro ships with the pocket clip already installed. If you wish to reverse the position of the pocket clip (for hatmounting, etc.), installation is simple.

- 1. Pull the clip off the Chicro body.
- 2. Orient the clip in the other direction.
- 3. Push the clip into place until it snaps on.
- 4. Installation is complete.

CHARGING YOUR CHICRO:

Charging the battery in your Chicro is very simple.

- 1. Plug in the USB-C cord. The indicator light will be Red/Green. This is indicating that the light has a power supply connected.
- 2. Click the tail cap switch to the "on" position. The indicator light will turn Solid Red. This indicates the light is now charging.
- 3. Once the light is charged, the indicator light will turn Solid Green. Disconnect the cord and turn the light off to complete the charging process.

NOTE: IF YOU PLUG THE LIGHT IN BUT DO NOT CLICK THE TAIL CAP BUTTON, THE LIGHT WILL NOT CHARGE!

MAINTENANCE:

The only thing you need to do in terms of maintenance is make sure the O-Rings stay lubricated and in good working order. No more than one small drop of lube is required at any one time.

WARRANTY:

Yes, the Chicro is made in China. However, we stand behind it like all our other products. It is covered under our full lifetime warranty.

IMPORTANT!

BATTERY INFORMATION

ONLY USE 10440 RECHARGEABLE CELLS: Chicro runs on a rechargeable 10440 cell. No other battery type is approved for use in Chicro.

NEVER USE AAA BATTERIES: The light will not function with a AAA primary cell.

WARNING: Use of "strobing" with the momentary function of the switch can cause a seizure in persons with photosensitive epilepsy.